

EXPERIENCE
THE MAGIC OF
PREMIUM
PRODUCE
PROTECTION

User Manual



**Instant confidence that your
MaTri application was successful
and that your apples are protected.**



FAST



RELIABLE



SIMPLE



EFFICIENT

MaTriSure provides results immediately after the gassing process is completed, without the need for specialized services. It not only ensures fruit protection but also saves time and money.

PRODUCT HANDLING

1. The product should be stored in a cold, dark, and dry place, protected from 1-MCP.
2. The label specified recommended storage temperature range: 36–43°F (2–6°C)
3. The product remains suitable for use for up to 2 months from the date printed directly on the label (format: YYYY.MM.DD).
After this period, the product should be destroyed.



Learn more
at **ma-tri.com**

...or contact us!

Keith Culver

+1 585 738 2189

keith.culver@freshinset.com

Scott Harker

+1 435 840 8153

scott.harker@freshinset.com



ma-tri.com

INSTRUCTIONS FOR USE



1

Remove the MaTri SURE strip from the zip-lock bag and inner packaging **just before the treatment**.



2

Fold MaTri SURE over the edge of the bin inside the treatment chamber. If the cold room has a window, hang the strip in a location that is visible from outside.



3

Write the date and time of treatment start as an **individual ID number** and **take a photo** of the pink plate "before treatment" (format: YYYY.MM.DD HH:MM).




4

Complete the **MaTri Powder or Tablets application**.



5

After 24h of treatment:
Check if the plate color
changed from pink to yellow.

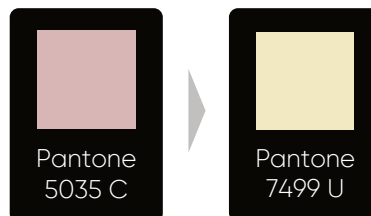

6

Take a photo of the yellow plate "**after treatment**", making sure the treatment start time is visible.

★ **Advanced product designed for controlled use**

Correct storage, handling, and use in accordance with the Standard Operating Procedure (SOP) ensure reliable performance.